

Cuisinart®

T

SERIES



Touchscreen Burr Grinder

DBM-T10C Series

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. **Read all instructions.**
2. **Unplug from the outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.**
3. To protect against risk of electric shock, do not immerse cord, plug or grinder in water or other liquids.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they are closely supervised and instructed concerning use of the appliance by a person responsible for their safety. Close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Contact the manufacturer at their customer service telephone number for information on examination, repair, or adjustment.
7. The use of attachments not recommended or sold by Cuisinart may cause fire, electric shock, or risk of injury.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Before using, check hopper for presence of foreign objects.
11. Use this appliance to grind roasted coffee beans only. Grinding other substances, such as nuts, spices or unroasted beans, may dull the blade and cause poor grinding or injury.
12. Do not use appliance for other than it's intended use.

-
13. Do not place this appliance on or near a hot gas or electric burner, or in a heated oven.
 14. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

NOTICE

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.



- | | |
|--|------------------------------------|
| 1. Hopper Lid | c. Cup Selector |
| 2. Bean Hopper | d. Manual Icon |
| a. with Burr Grinder | e. Start Icon |
| Attached (not shown) | f. Power Icon |
| 3. Grind Selector | 5. Grind Chamber with Lid |
| 4. Control Panel with LCD Display | 6. Cord Storage (not shown) |
| a. Number of Cups | 7. Scoop Brush |
| b. Countdown Timer | |

INTRODUCTION

The next generation of coffee grinders has arrived to deliver the new standard in home-ground coffee! The burr grinds the beans with precise uniformity while maintaining the full flavour of the coffee bean. Whether you're using a French Press, Auto Drip or Espresso machine, you'll always start with the best, most precise ingredients. This grinder is fully automated – just choose your grind setting and number of cups, touch Start, and the LCD with countdown timer lets you know how soon you'll have your perfectly ground coffee!

OPERATING INSTRUCTIONS

1. Remove bean hopper lid.
2. Fill bean hopper, making sure that the lid closes securely. Maximum bean capacity is 8 oz (227 g). Be sure you have enough beans to grind your desired amount of coffee.
3. Select grind setting – turn the hopper to the desired setting. The higher the number, the coarser the grind. Use 1–6 for Espresso, 7–12 for Auto Drip, 13–18 for French Press.
4. Plug cord into outlet. Touch the power icon to illuminate the touchscreen.
5. Select cup setting – press the cup selector icon repeatedly until your desired number of cups is displayed on the LCD, from 1 to 14 cups. Press and hold the icon to scroll through the numbers quickly.
6. Touch the Start icon to begin grinding. A safety interlock system prevents the unit from operating unless the hopper and grind chamber are properly in place.
7. Grinding will automatically stop upon completion.
NOTE: To cancel operation during use, touch the Start or Power icon. The grinder will stop and the display will return to the selection screen.
8. Pull the grind chamber toward you to remove from unit.
NOTE: If the grind chamber is overfilled, the chute can get clogged and the unit will not work. To unclog, use the scoop brush to clear out the chute of excess grounds. Should the grinder stop at any point, the motor has likely overheated. Wait for your grinder to cool off (up to 30 minutes), then resume use.

MANUAL GRIND

If you prefer, after selecting your grind setting, you have the option of manually controlling how much coffee the unit will grind. To do so, follow steps 1–4 on previous page. Then press and hold the manual icon until the desired amount of coffee has been ground. The LCD will display the number of cups dispensed.

NOTE: To avoid overflow when using the manual feature, the grinder will automatically stop grinding when the maximum capacity has been reached.

CLEANING/MAINTENANCE INSTRUCTIONS

1. Be sure plug has been removed from outlet.
2. Beans can be removed from the hopper by lifting off the lid and pouring excess beans out. Hold down the Manual icon to clean out any remaining beans.
3. The bean hopper lid, grind chamber, and grind chamber lid can be washed by hand with hot, soapy water or placed in the top shelf of a dishwasher. Dry thoroughly.
4. To remove the bean hopper for easy cleaning, simply remove beans, then turn the hopper counterclockwise to unscrew and lift out.
5. Use the brush to remove grinds or wash by hand. After cleaning, place the bean hopper onto unit and rotate until the piece is fully inserted.

NOTE: The hopper will not attach to the unit if it has not been fully inserted.

6. Wipe body of grinder with a damp cloth.

WARNING: Never immerse unit in water.

Maintenance

Any other servicing or maintenance should be performed by an authorized service representative.

WARRANTY

Limited 18-Month Warranty

We warrant that this Cuisinart product will be free of defects in materials or workmanship under normal home use for 18-month from the date of original purchase. This warranty covers manufacturer's defects including mechanical and electrical defects. It does not cover damage from consumer abuse, unauthorized repairs or modifications, theft, misuse, or damage due to transportation or environmental conditions. Products with removed or altered identification numbers will not be covered.

This warranty is not available to retailers or other commercial purchasers or owners. If your Cuisinart product should prove to be defective within the warranty period, we will repair it or replace it if necessary. For warranty purposes, please register your product online at www.cuisinart.ca to facilitate verification of the date of original purchase and keep your original receipt for the duration of the limited warranty. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discolouration or other damage to external or internal surfaces that does not impair the functional utility of the product. This warranty also expressly excludes all incidental or consequential damages.

Your Cuisinart product has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart.

If the appliance should become defective within the warranty period, do not return the appliance to the store. Please contact our Customer Service Centre:

Toll-free phone number:

1-800-472-7606

Address:

Cuisinart Canada

100 Conair Parkway

Woodbridge, ON L4H 0L2

Email:

consumer_Canada@conair.com

Model: DCC-T20C

To facilitate the speed and accuracy of your return, please enclose:

- \$10.00 for shipping and handling of the product (cheque or money order)
 - Return address and phone number
 - Description of the product defect
 - Product date code*/copy of original proof of purchase
 - Any other information pertinent to the product's return.
- * What date code format we are using on unit is WWYY, representing week, and year. eg.2420 = manufactured in 24th week of the year 2020.

Note: We recommend you use a traceable, insured delivery service for added protection. Cuisinart will not be held responsible for in-transit damage or for packages that are not delivered to us.

To order replacement parts or accessories, call our Customer Service Centre at 1-800-472-7606. For more information, please visit our website at **www.cuisinart.ca**

NOTES

Cuisinart®



Coffeemakers



Blenders



Juicers



Cookware



Tools and
Gadgets

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever.

Try some of our other countertop appliances and cookware, and Savor the Good Life®.

www.cuisinart.ca

©2020 Cuisinart Canada
100 Conair Parkway,
Woodbridge, ON L4H 0L2

Printed in China

19CC035102

IB-16414-CAN