

Cuisinart™

INSTRUCTION
BOOKLET



Motorized Metal 2-Slice Toaster

CPT-420C

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **Read all instructions.**
2. **Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.**
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical shock, do not place any part of the toaster in water or other liquid. See instructions for cleaning.
5. This appliance should not be used by or near children, or individuals with certain disabilities.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or if it is not operating properly. Return the toaster to store or retailer where purchased for examination or repair.
7. The use of accessory attachments not recommended by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or countertop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for other than intended use.
12. Oversize foods, metal foil packages or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies or walls, when in operation. Do not operate under wall cabinets.
14. Do not attempt to dislodge food when the toaster is plugged into electrical outlet.
15. To avoid possibility of fire, do not leave toaster unattended during use.
16. To disconnect, push the cancel button, then remove plug from wall.

17. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use.

If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

NOTICE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

CONTENTS

Important Safeguards	2
Features and Benefits	3
Use and Care	4
Cleaning and Maintenance	5
Warranty	6

FEATURES AND BENEFITS

1. **1½inch (3.17 cm) Toasting Slots**
Wide toaster slots toast a wide variety of items.
2. **Browning Control Button +/-**
Set selected shade. Seven browning levels toast from light to dark.
3. **Toast Button**
Activate the toasting cycle.
4. **Bagel Button**
Reduce the heat on the outside of each toasting slot, to perfectly toast the cut side of the bagel. LEDs light when selected.
- 4a. **Bagel Icon**
Show the proper placement for bagel toasting.
5. **Defrost Button**
Defrost and toast frozen bread. LEDs light when selected.
6. **Reheat Button**
Reheat without browning or toasting. LED light when selected.
7. **Cancel Button**
Interrupt toasting process.
8. **LCD Countdown Window**
Blue backlit LCD screens display the shade setting selected, and provide a countdown so you know when your toast is ready.

9. **Slide-out Crumb Tray (not shown)**
Pulls out to clean crumbs that collect in bottom of toaster.
10. **Cord Storage (not shown)**
Takes up excess cord and keeps countertop neat.
11. **Audible Tone (not shown)**
Lets you know when toasting is finished.
12. **BPA Free (not shown)**
All materials that come in contact with food are BPA free.



USE AND CARE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug power cord into the wall outlet.

- 1. Insert slice(s) of bread**
- 2. Set the browning control + / -**
Press browning control buttons (+ -) to select desired toast shade:

Browning Control Setting	Shade
1-2	light
3-5	medium
6-7	dark

Some notes on browning

Toasting is a combination of cooking and drying the bread. Therefore, differences in moisture level from one bread to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.
- Thickly cut pieces of bread (including bagels) will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose raisins, etc. from the surface of the bread before putting into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking to the guide wires in the slot.
- Before toasting bagels, slice each bagel into two equal halves.

Single slice toasting

If you are toasting a single slice of bread, set the heat selector to a lighter setting than you normally would. The toaster is designed to heat the whole toasting chamber for two slices. By lowering the heat for a single slice, you won't overtoast.

Frozen waffles, pancakes, french toast and frozen bagels

These breads and pastries should be warmed using the Defrost button.

Toaster pastries

Exercise caution with toaster pastries; the filling can become quite hot, long before the surface of the pastry becomes browned. Never leave toaster pastries unattended while toasting or warming.

- 3. To begin toasting**
Press the toast button to lower the carriage into the toasting chamber.
- 4. To stop toasting**
When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the Cancel button.

Tips

- Never force foods into the toasting slot. Foods should fit freely between the guide wires.
- Do not place buttered breads or pastries with fillings or frostings in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to bread slices of uneven thickness.
- After use, unplug your toaster from the electrical outlet.

Defrost button

The Defrost button is designed to first defrost and then toast the bread, which extends the toasting cycle slightly.

- 1. Insert slice(s) of bread.**
- 2. Set the browning control.**

Settings 1-2

For refrigerated breads and thinner frozen items such as frozen pancakes.

Settings 3-5

For toaster pastries, frozen waffles and (thin) French toast, and refrigerated bagels.

Settings 6-7

For thicker frozen items such as bagels, hand-cut bread and thick French toast.

- 3. Press the Defrost button. Blue LED indicates feature is activated.**
- 4. Press the toast button to start.**

To stop cycle

When the defrost cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt.

After use, unplug the toaster from the electrical outlet.

Reheat button

The reheat feature allows you to reheat bread without browning or toasting.

 
- 1. Insert slice(s) of bread.**
- 2. Press the Reheat button. Blue LED indicates feature is activated.**
- 3. Press the toast button to start.**

To stop cycle

When the reheat cycle is complete, the toaster will raise the bread. If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt.

Bagel button

The bagel feature reduces heat on one side of the toasting slot. This toasts the cut side of the bagel slightly more than the other side.

 An embossed icon located on the top of the toaster, just above the control panel, shows you the right way to insert your bagel. (The cut side should always face toward the center of the pair of toasting slots.)

- 1. Insert slice(s) of bread or halved bagels**
- 2. Press the Bagel button. Blue LED indicates feature is activated.**
- 3. Press the toast button to start.**

To stop cycle

When the bagel cycle is complete, the toaster will raise the bagel(s). If you wish to stop the cycle before it is finished, simply press the Cancel button to interrupt.

Fail-Safe

- Should the unit sense that it is over-heating it is designed to activate a "Fail-Safe" to ensure it can cool down quickly and be able to return to a safe, usable state.
- When the Fail-Safe is activated all the LCD and LED lights will come on and the unit will sound (3) one-second audible tones. The LCD and LED lights will remain on until the unit is unplugged and re-plugged into the outlet.

CLEANING AND MAINTENANCE

Always allow the toaster to cool completely before cleaning.

1. Always unplug the toaster from the electrical outlet before cleaning.
2. Do not use abrasive cleansers. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Apply any cleansing agent to a cloth, not to the toaster, before cleaning.
3. To remove crumbs, slide out the crumb tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
4. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slot, as this could damage the toaster and cause a safety hazard.
5. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
6. Any other servicing should be performed by an authorized service representative.

Cuisinart™

SAVOUR THE GOOD LIFE®



Coffeemakers



Blenders



Juicers



Cookware



Tools and
Gadgets

Cuisinart™ offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances, cookware, tools and gadgets.

www.cuisinart.ca

©2012 Cuisinart Canada
100 Conair Parkway,
Woodbridge, Ontario L4H 0L2
Printed in China

12CC131079

Any other trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

IB-10775-CAN